



CLASSIC SERIES | Tuff™

RECOMMENDED STRAIGHT DRILL PROTOCOL

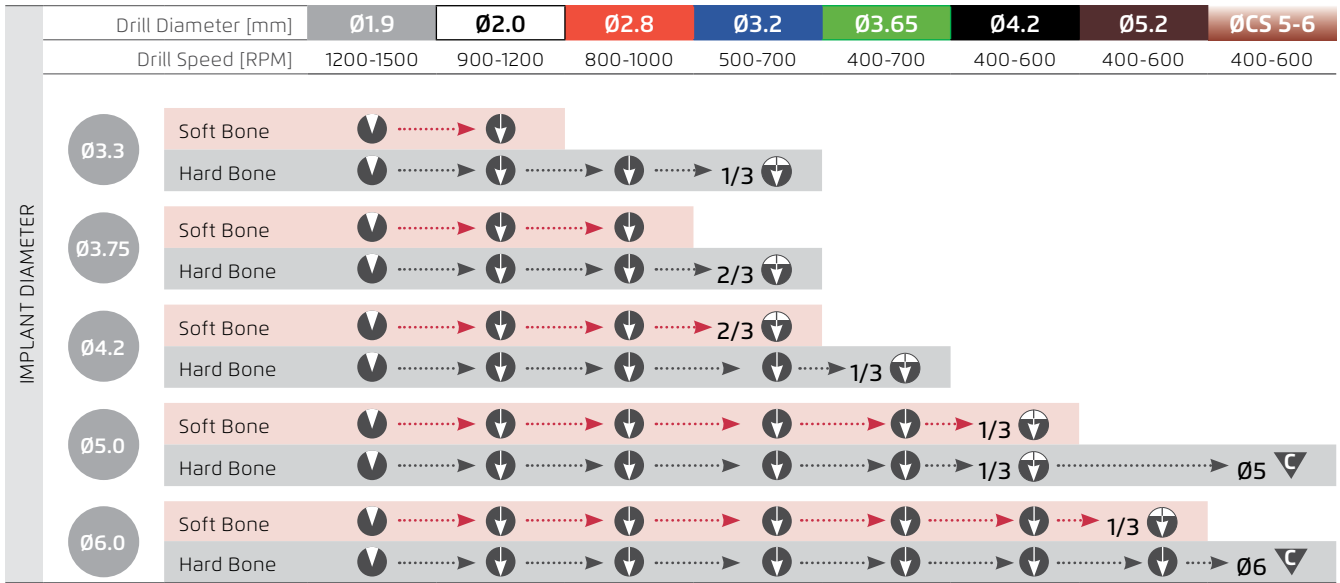


RECOMMENDED STEP DRILL PROTOCOL

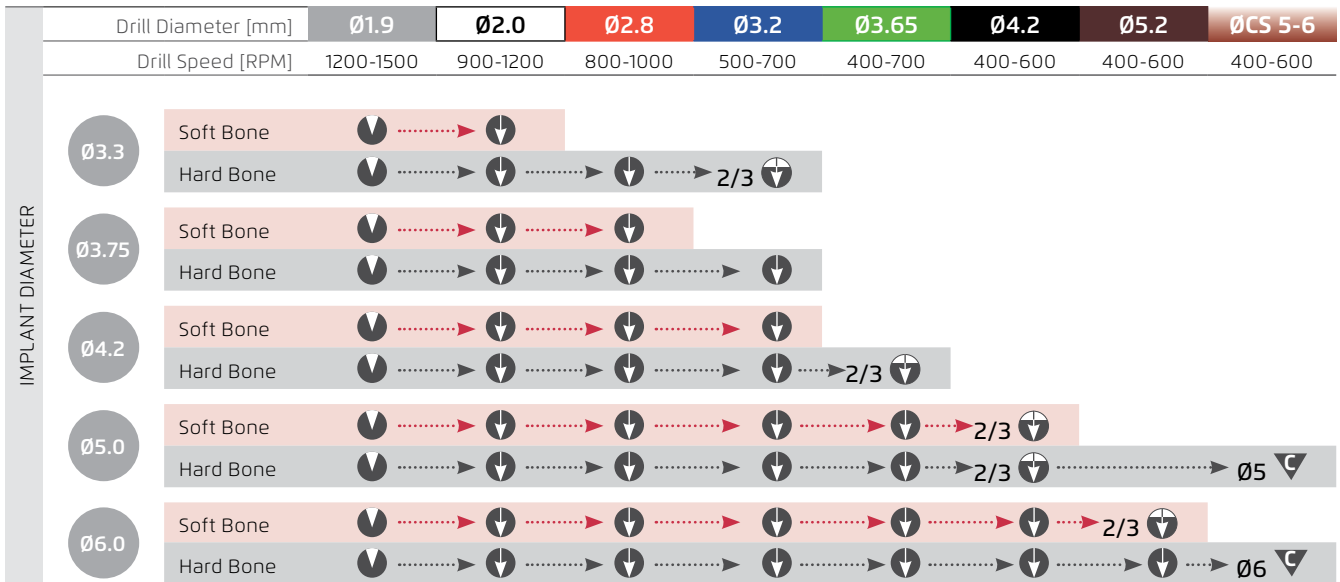

 Drill to mark osteotomy site	 Drill osteotomy to implant	 Drill osteotomy partially according to implant	 Drill with countersink to prepare the crest
--	--	--	---

The recommended drill protocol procedure should not replace the dentist's/surgeon's judgment. The implants may be loaded for immediate function when good primary stability (above 35 Ncm) has been achieved and with appropriate occlusal loading.

 For Implants longer than 16mm please refer to Long Drills page